



STANDARD CONST. JOINT DETAILS - SLAB INTO WALL TO KEEP WATER IN

Not subject to hydrostatic pressure

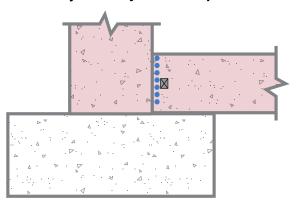

Subject to hydrostatic pressure

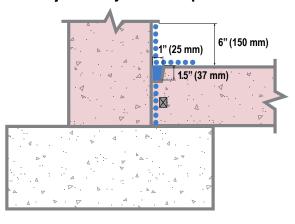

•••• CONCENTRATE SLURRY COAT

CONCENTRATE DRY-PAC

ADMIX

WATERSTOP

STEP 1: Clean joint thoroughly. Apply Xypex Concentrate slurry to joint surface at the rate of 2.0 lb./sq.yd. (1.0 kg/m²).

STEP 2: Where the slab will contact the wall, create a linear groove in the finished concrete surface of the slab. The linear groove is to be 1" (35 mm) wide by $1\frac{1}{2}$ " (37 mm) deep.

STEP 3: Pour Xypex Admix treated concrete and cure in accordance with ACI, EN or other applicable international standard. Strip forms including formwork for linear groove.

STEP 4: Clean linear groove thoroughly. Apply Xypex Concentrate slurry to the linear groove at the rate of 1.5 lb./sq.yd. (0.8 kg/m²). Fill linear groove with Xypex Concentrate Dry-Pac and pack tightly to create the Xypex "sealing strip".

STEP 5: Apply slurry of Xypex Concentrate at 1.5 lb./ sq.yd. (0.8 kg/m²) over sealing strip and extending to 6" (150 mm) on either side. Cure for 48 - 72 hours in accordance with normal Xypex coatings curing procedures.

Note 1: Schematic diagram shows Xypex application and waterstops. Inclusion, type and position of waterstops and expansion joints are at the discretion of the designer. Expanding waterstops may be placed on the slurry coat after it has dried or before application. Slurry coat may only be applied over waterstop if approved by waterstop manufacturer.

Note 2: Keyways may be incorporated into the joint design at the discretion of the designer.

Note 3: Xypex Admix may be considered for footings to protect the concrete and thus extend the service life of the structure.

Note 4: Schematic drawing shows Xypex Admix application. Specifier may consider the alternative use of Xypex dry shake (DS-Series) or Xypex coatings, where applicable. Refer to Xypex Standard Specifications for more information.